

SETTING YOUR PERSONAL COMBINATION

Your new resettable combination Cabinet Lock is preset at 0-0-0. (Even though dials may appear in other numbers).

To reset the combination:

Step 1

Leave the dials at preset combination 0-0-0.

Step 2

Turn the Lock clockwise 90° to the open position.

Step 3

Use a pin like a big paper chip to insert in to a hole of lock body, press the pin down all the way. keep holding the pin and set the dials to your own desired combination. (Do not let go of the pin while setting the dials.)

Step 4

Release the pin, your lock is now ready to open at your own personal combination.

