

# Electronic Combination Cam Lock CL251V


Available in Vertical (V) and Horizontal (H) version



## Userguide

Introduction.....	2
Battery installation.....	2
Private use instructions.....	2-3
Public use instructions.....	3
Alarm function.....	4
Installation instructions.....	4-5
Trouble shooting.....	5
Change battery.....	5
Dimensions.....	5

# Electronic Combination Cam Lock CL251V

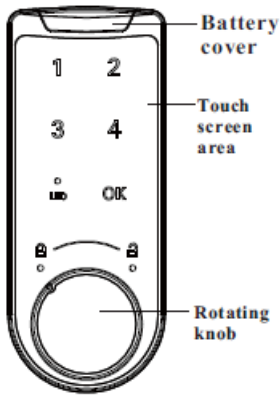

## Introduction

- 1-8 digit user code
- 87,380 possible codes
- User code is stored when battery power is lost or removed
- One year battery life
- Short warning tone for low battery
- Tampering alarm

## Application:


Wood and Metal materials from 0.6mm-22mm

## Function:

- Standard use - Enter user code and it remains until reset.
- One time use - Enter user code to lock and unlock only once.


## Battery Installation

1. Slide battery cover open and place battery in holder

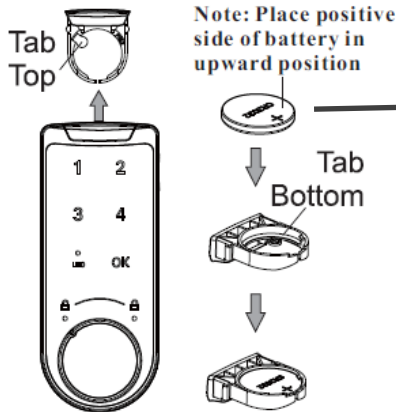

2. Confirm proper battery installation

- Press numbers on touch pad
- Listen for "BEEP" tone
- Look for LED indicator light

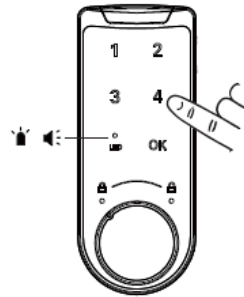

Battery Type: **CR 2032**




## Instructions **Private** use (14.60.391)


Factory default code is 123123

### 1) Unlock

1. Key in 123123 then "OK"  
listen for long "BEEP"

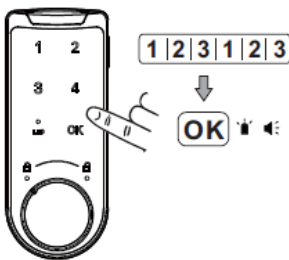


2. Turn knob clockwise to "🔓" position. Lock is now unlocked.

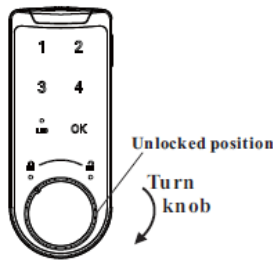


### 2) Lock

1. Turn knob counter clockwise to "🔒" locked position

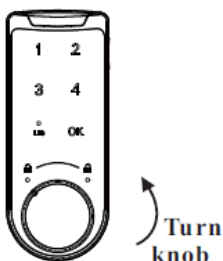

2. Knob is now in a fixed locked position

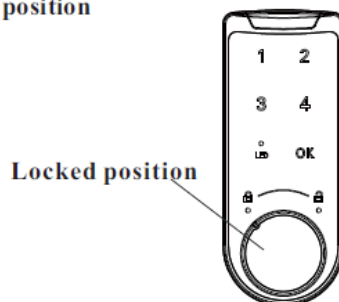

# Electronic Combination Cam Lock CL251V

## Instructions **Private** use (14.60.391)

### Code Setting (Can be set 1-8 digits long)



#### Example:

Change factory default code "123123" into new code "12341234"

1. Enter code 1-2-3-1-2-3  
Press OK + OK (OK x 2)  
Enter new code 1-2-3-4-1-2-3-4  
Press OK (OK x 1),  
Listen for longer "BEEP" tone

2. Code is now reset  
1 2 | 3 4 | 1 2 | 3 4 = ✓

-Remember 12341234  
-Securely store new code

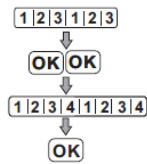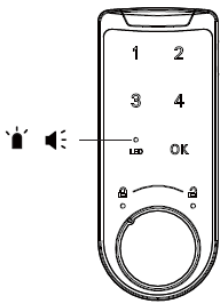

Forgot your code?

**For Private version:**

Enter Mastercode "xxxxxxx" then press OK button. Wait for 2 seconds and the lock is reset to factory status.

Use now the factory default user code 123123 + OK button and then turn the knob.

You can now set your personal code.


**For Mastercode, please contact your furniture supplier.**

## Instructions **Public** use (14.60.390)


Factory default code is 123123

### 1) Unlock

1. Key in 123123 listen for long "BEEP"

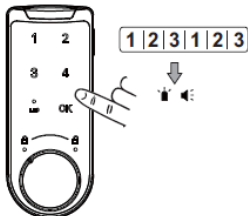


2. Turn knob clockwise to "🔓" position. Lock is now unlocked.

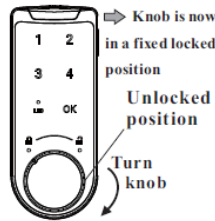


### 3) Unlock

1. Key in 321321 listen for long "BEEP"

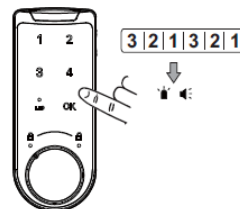

2. Turn knob clockwise to "🔓" position. Lock is now unlocked.

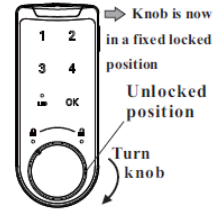


\*NOTE: Code is good for one use only. Repeat process for new code\*


### 2) Lock - Set new code -CODE SETTING MUST BE 6 DIGITS LONG

1. Key in new code 321321

Listen for long "BEEP"

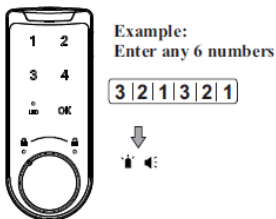

2. Turn knob counter clockwise to "🔒" locked position.

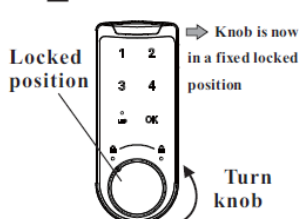

Forgot your code?

**For Public version:**

Enter Mastercode "xxxxxxx" then press OK button. Wait for 2 seconds and the lock is reset to factory status.

Use now the factory default user code 123123 + OK button and then turn the knob.


The lock is now ready for use.

**For Mastercode, please contact your furniture supplier.**


# Electronic Combination Cam Lock CL251V

## Alarm Function

1. Continuous alarm sounds for 60 seconds when code is incorrectly entered 4 times.

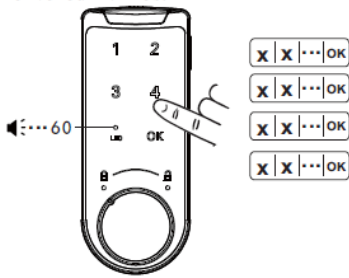

2. Enter correct code to silence the alarm.

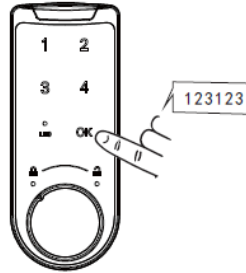


### Note:

- Power is supplied by a button cell battery (Model CR2032) with an expected operating life of 1 year with normal usage.
- Three consecutive "BEEP, BEEP, BEEP" tones will indicate low battery life when correct code is entered.
- 200 operating cycles remain when "BEEP, BEEP, BEEP" tone begins.
- Replace battery to ensure proper operation of lock and before the lock becomes inoperable.


## Installation instructions vertical set up

### 1. Drill holes

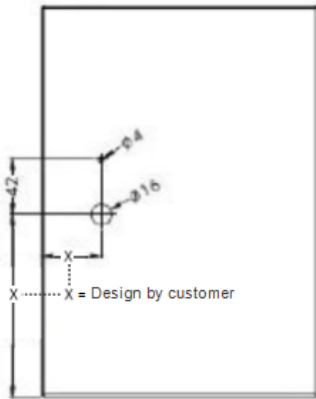


### 2. Install lock with supplied hardware

- M3.5 flanged screw
- 1 Large nut

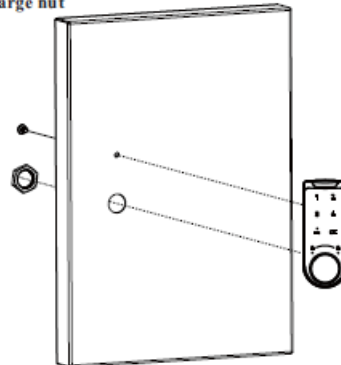


## Installation instructions horizontal set up

### 1. Drill holes

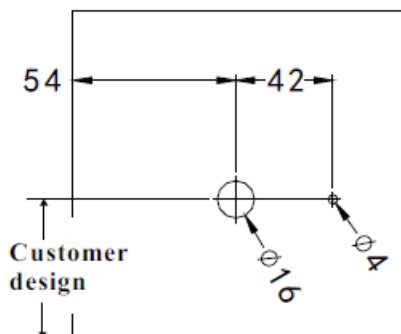

### 2. Install lock with supplied hardware


- M3.5 flanged screw
- 1 Large nut

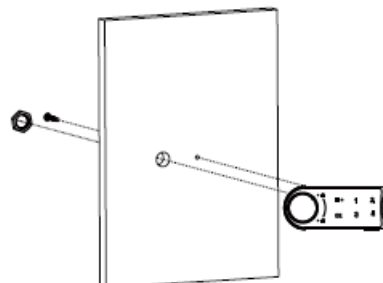


# Electronic Combination Cam Lock CL251V

## Installation instructions cam and screws

### 3. Install supplied CAM and screws

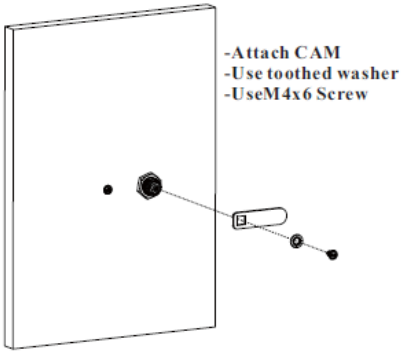

### 4. Install L-type strike plate using supplied screws

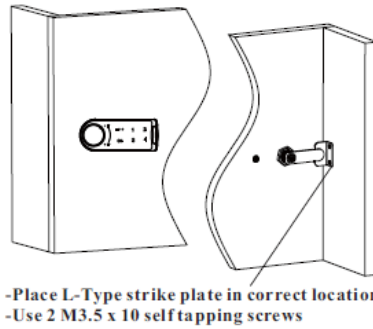


## Trouble shooting


ISSUE	CAUSE	FIX
Alarm continues to sound after code has been entered 3 times	Wrong code	Enter correct code
1. When pressing buttons -No alarm -No sound 2. Three beeps occur after correct code is entered 3. Lock cannot be open	Low power	Change battery

## Change battery

1. Battery change required when "BEEP, BEEP, BEEP" sounds three times after unlocking

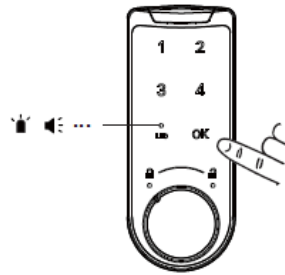

2. Follow below steps to change the battery

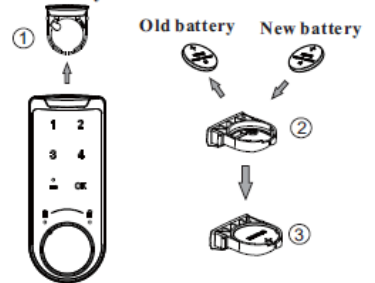

## Dimensions

