



INSTRUCTION MANUAL FOR WINDOW WIRE LOCK W/DIGITS

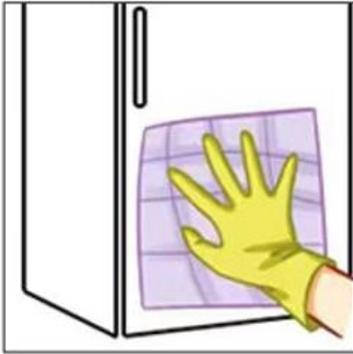

1) Clean the surface

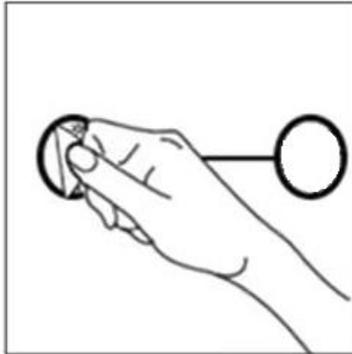

2) Peel off the tape on the base and stick it onto the surface



3) Wait 12 hours for the glue to stick



4) Set the digits to 000 and press the button to open the lock



5) Use a small, sharp object to point into the reset button hole and hold it until you have changed the password



6) The lock is now ready to be used with your personal code