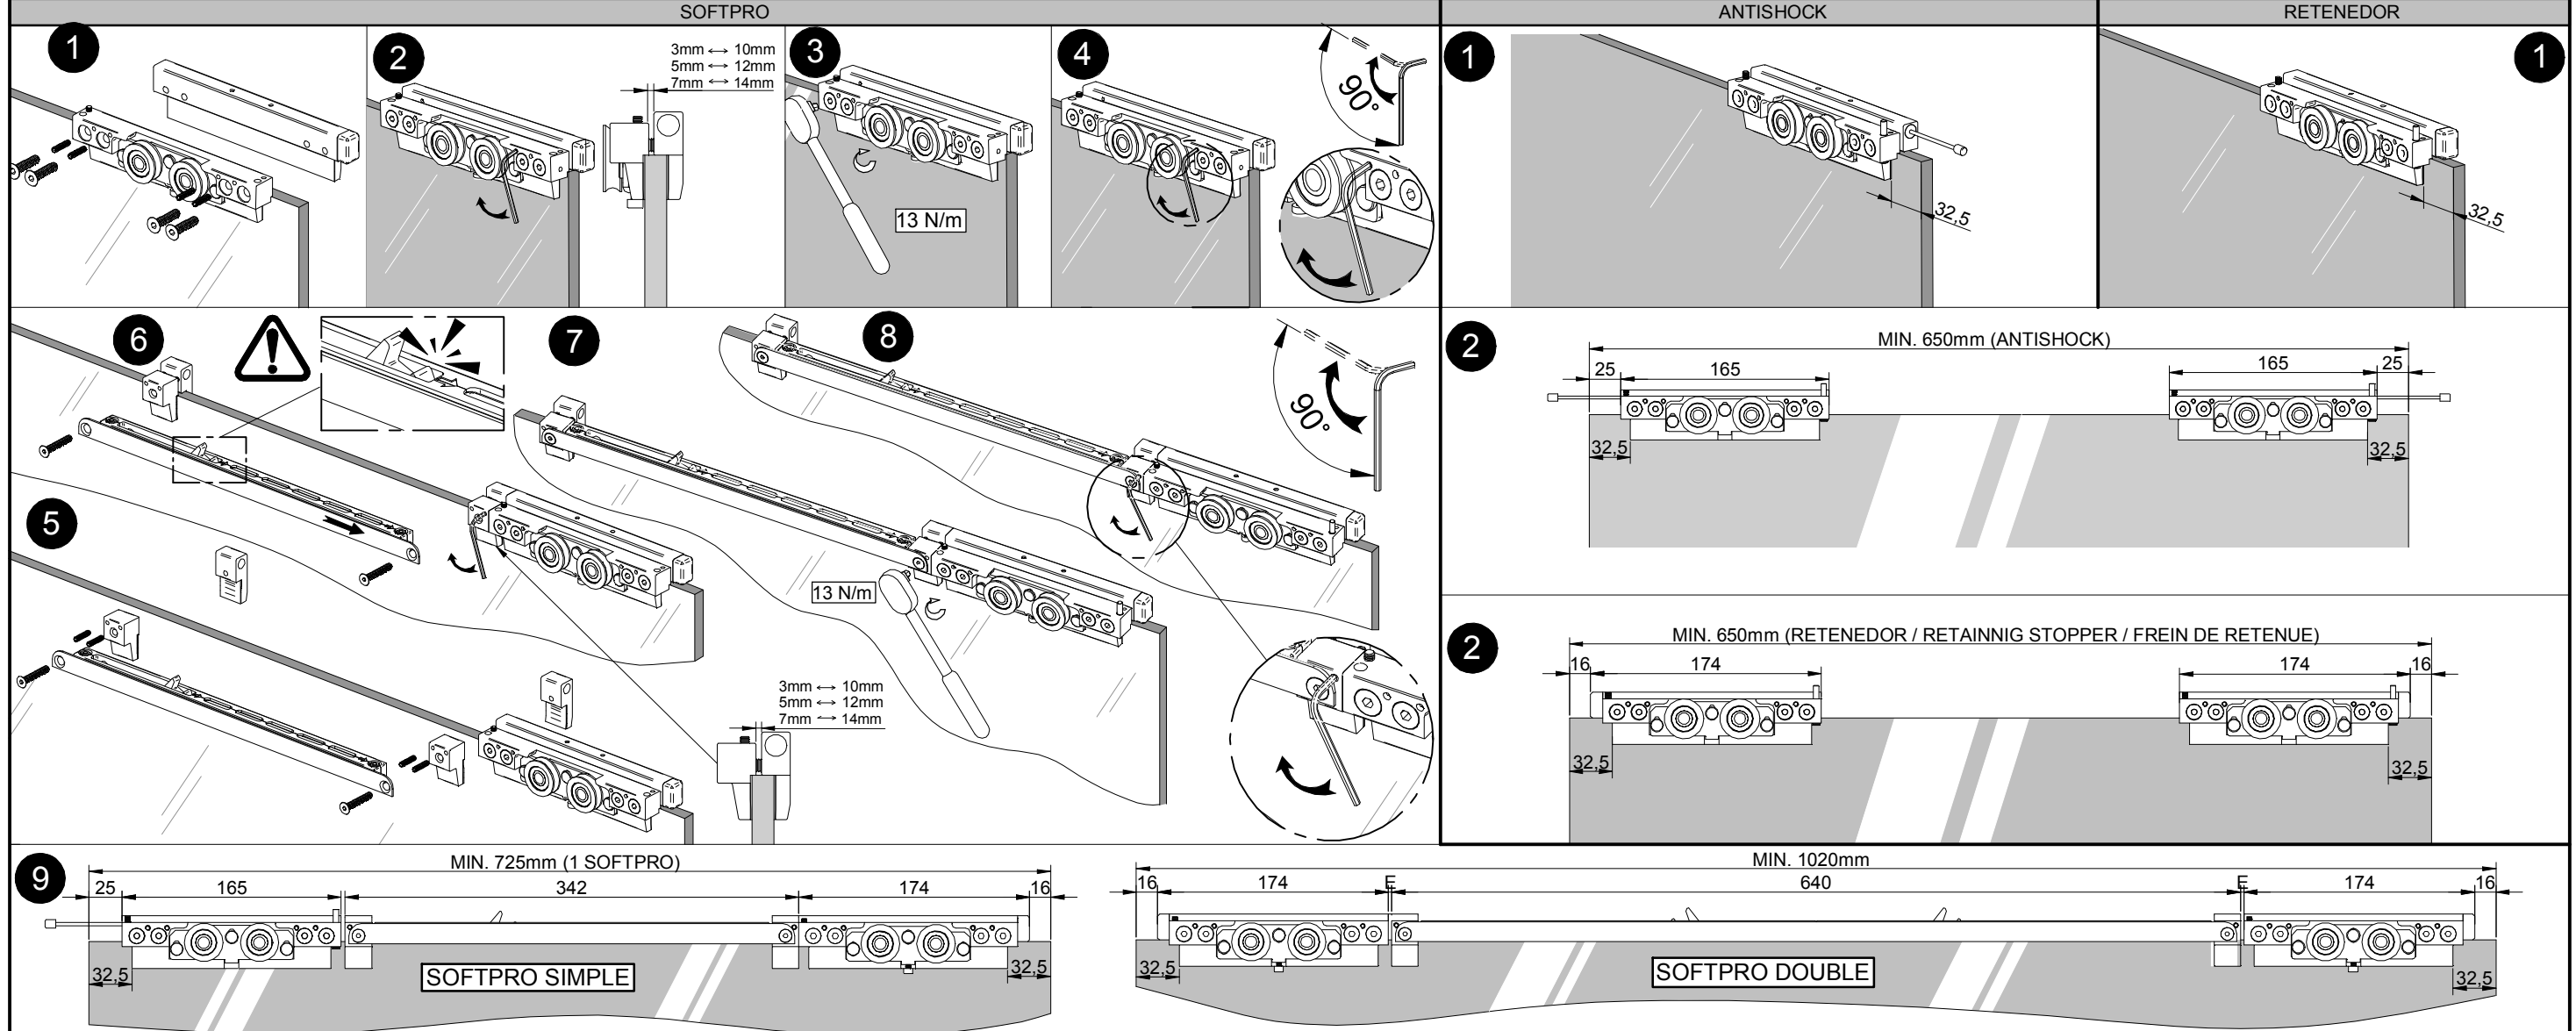
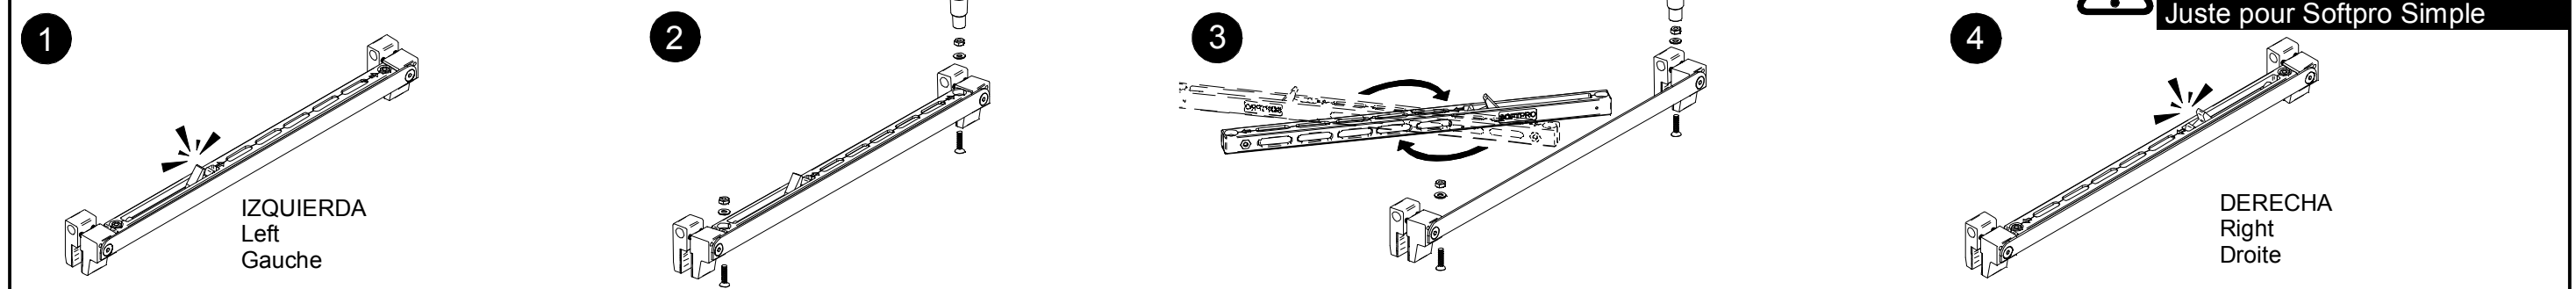


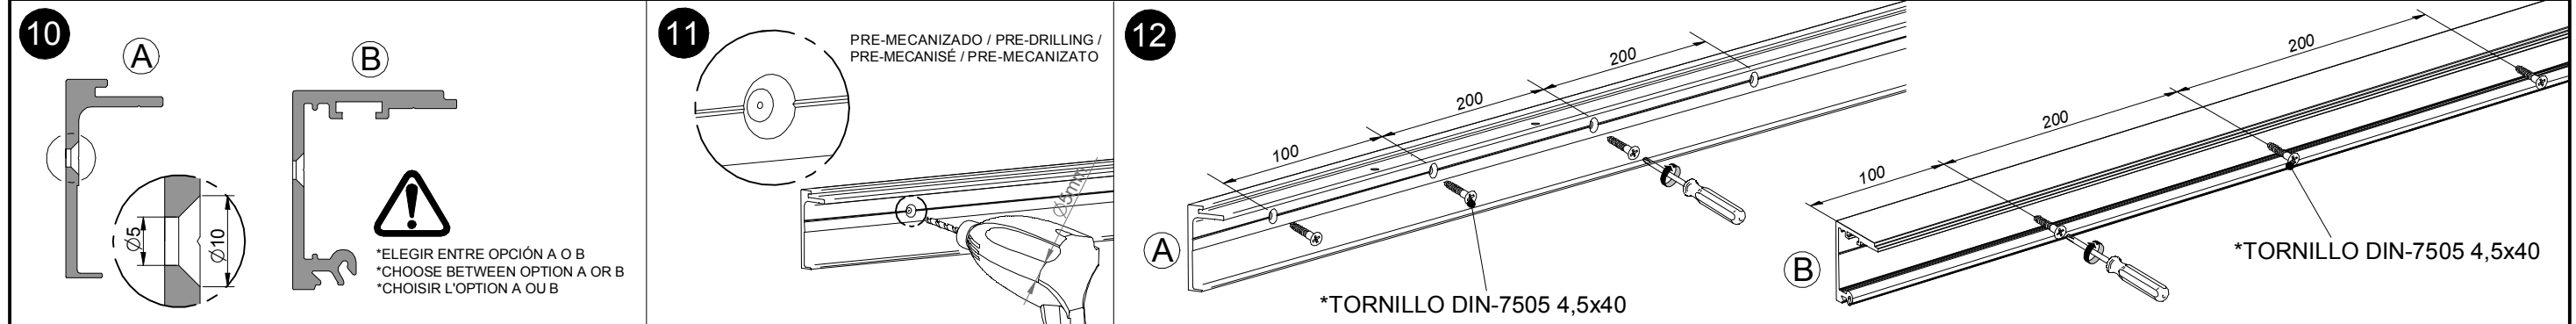
MONTAJE PINZAS / CLAMPS ASSEMBLY / ASSEMBLAGE PINCES / MONTAGGIO PINZA



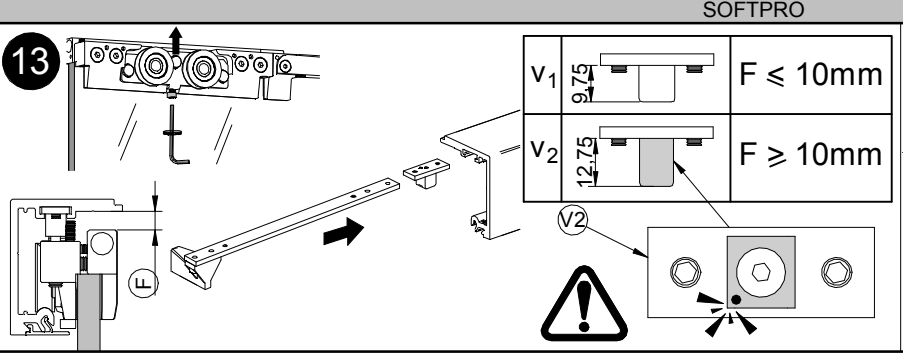
MONTAJE SOFTPRO IZQUIERDA / DERECHA
Softpro Left / Right assembly - Assemblage Droite / Gauche

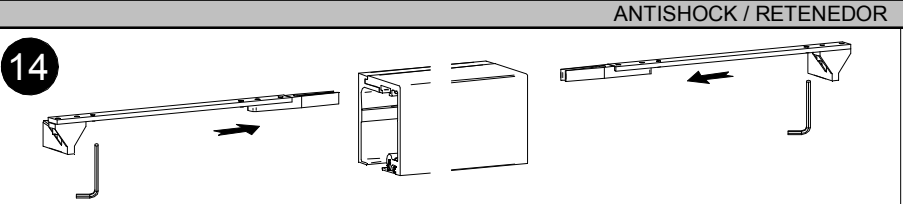


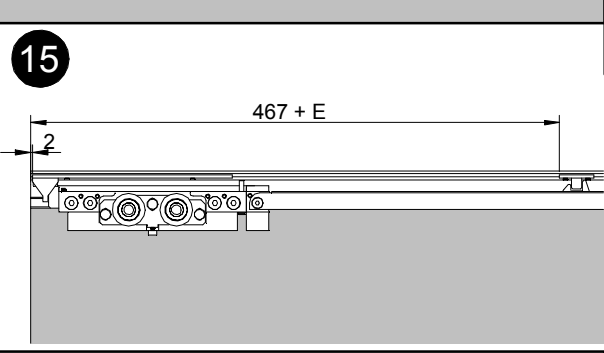
MONTAJE A PARED / WALL MOUNT / ASSEMBLAGE A MUR / MONTAGGIO A MURO

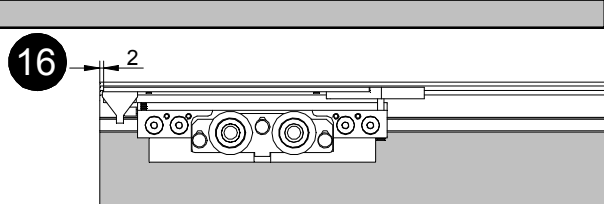


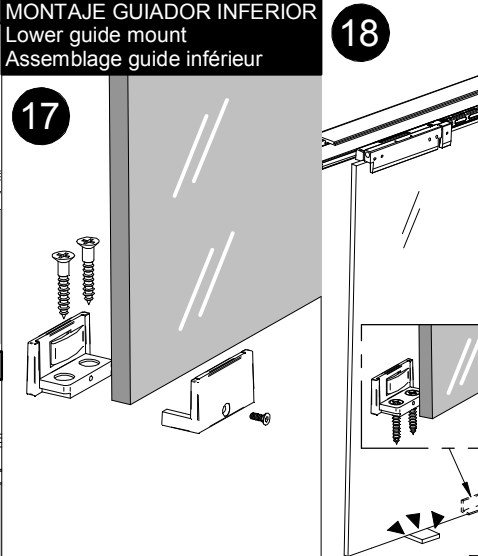
SOFTPRO

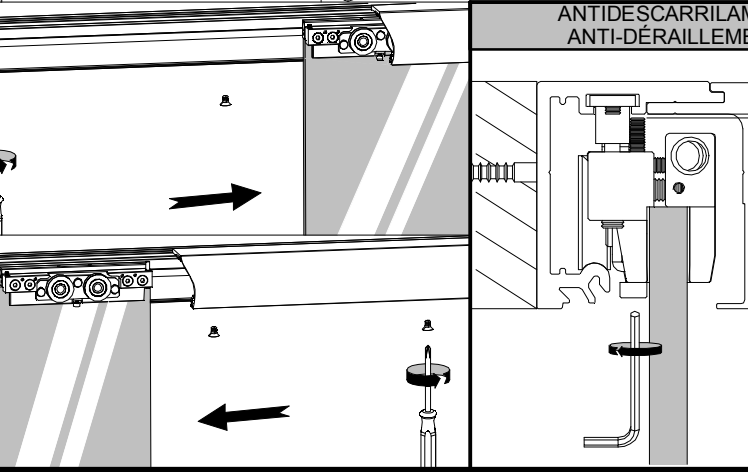
13  V_1 9.75 $F \leq 10\text{mm}$
 V_2 12.75 $F \geq 10\text{mm}$
 ! NO QUITAR LAS ALZAS / DON'T REMOVE FLOOR SPACERS

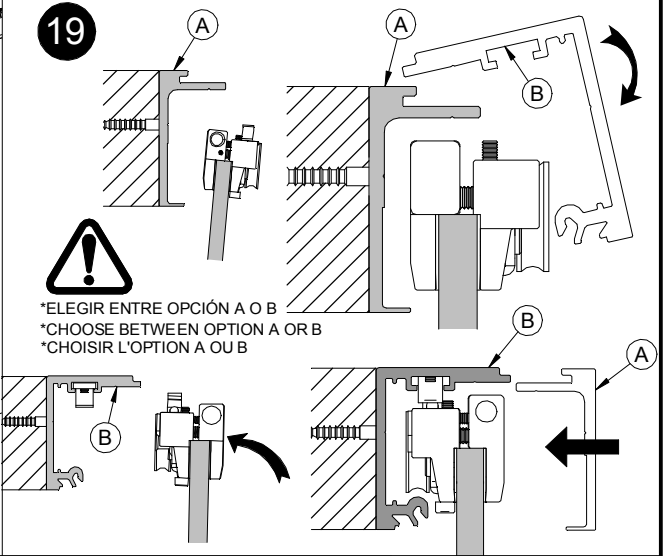
14 **ANTISHOCK / RETENEDOR** 

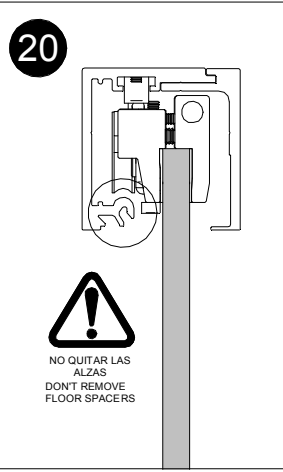
15  467 + E 2

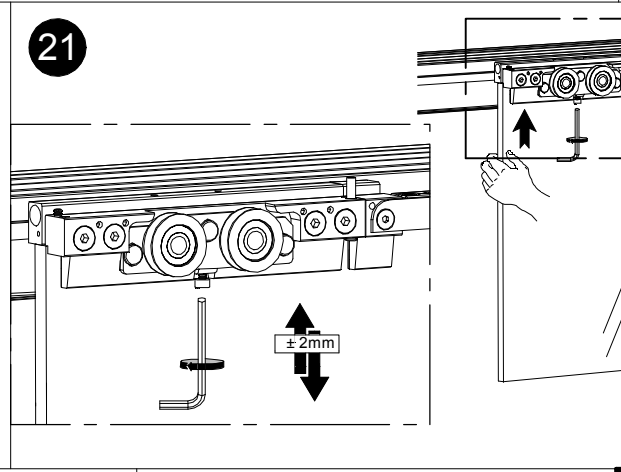
16  2

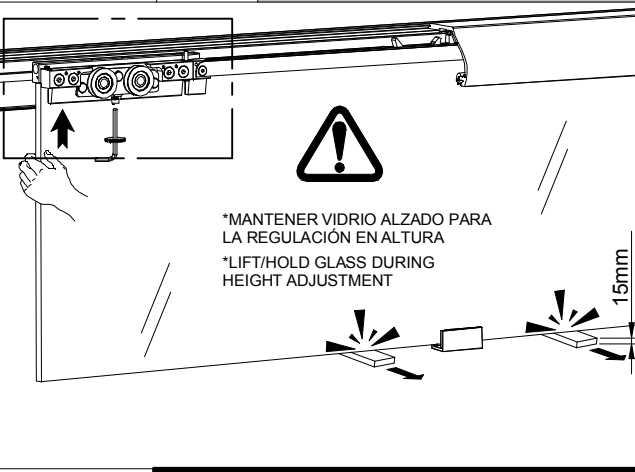
17 **MONTAJE GUIADOR INFERIOR / Lower guide mount / Assemblage guide inférieur** 

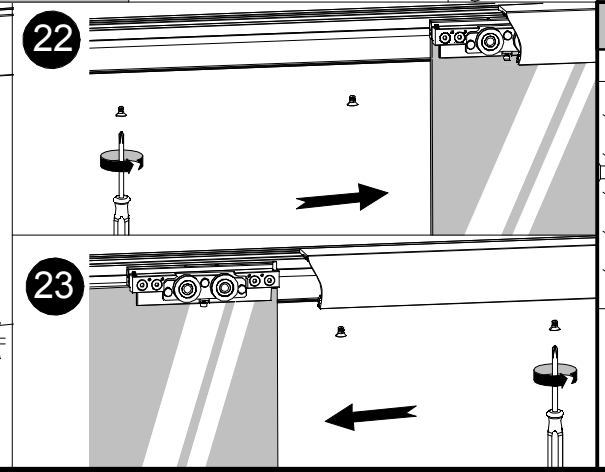
18 

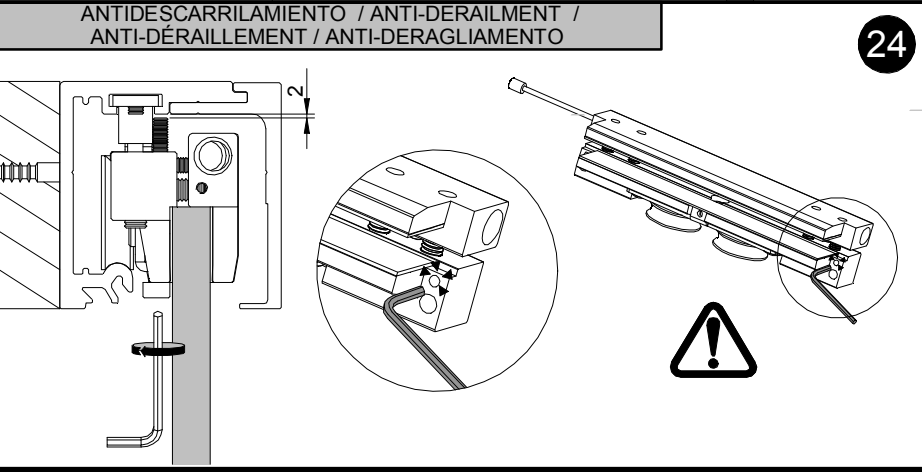
19  A B
 ! *ELEGIR ENTRE OPCIÓN A O B / *CHOOSE BETWEEN OPTION A OR B / *CHOISIR L'OPTION A OU B

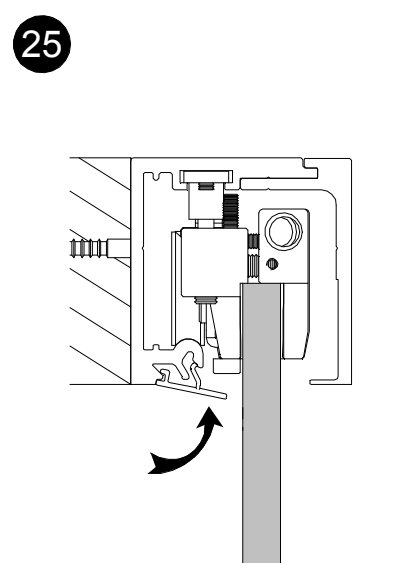
20  ! NO QUITAR LAS ALZAS / DON'T REMOVE FLOOR SPACERS

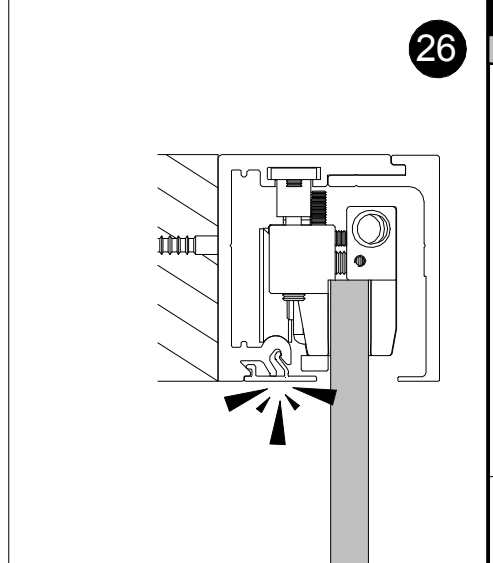
21  ±2mm

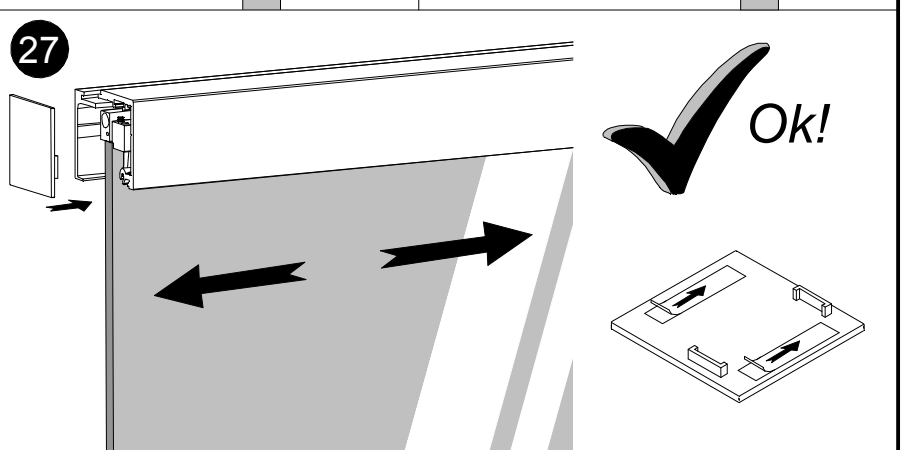
22  ! *MANTENER VIDRIO ALZADO PARA LA REGULACIÓN EN ALTURA / *LIFT/HOLD GLASS DURING HEIGHT ADJUSTMENT 15mm

23 

24 **ANTIDESCARRILAMIENTO / ANTI-DERAILEMENT / ANTI-DÉRAILLEMENT / ANTI-DERAGLIAMENTO**  !

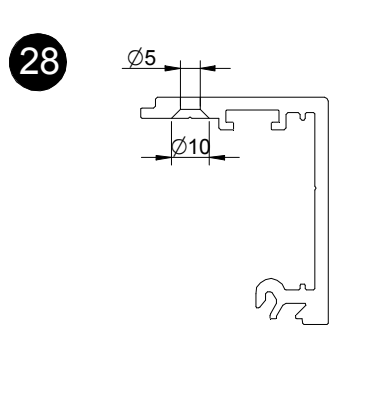
25 

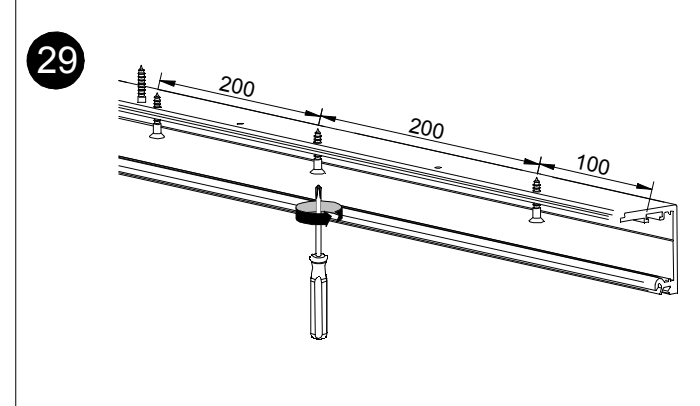
26 

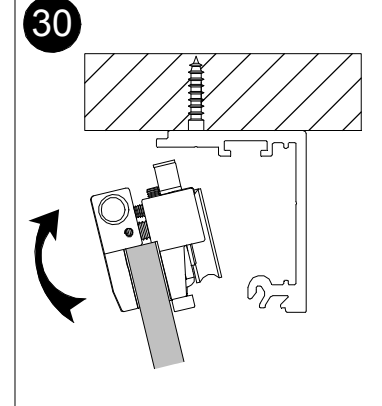
27  Ok!

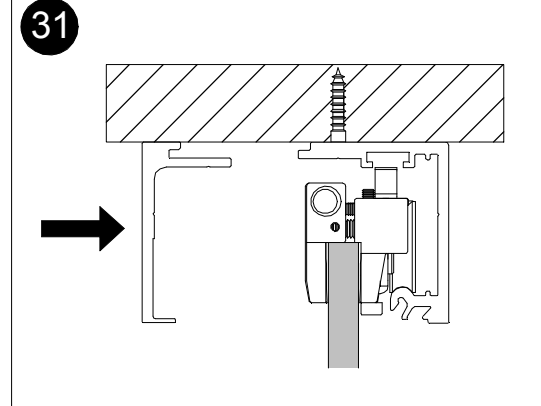
VARIANTES DE INSTALACIÓN / INSTALLATIONS VARIANTS / VARIANTES DE INSTALLATION

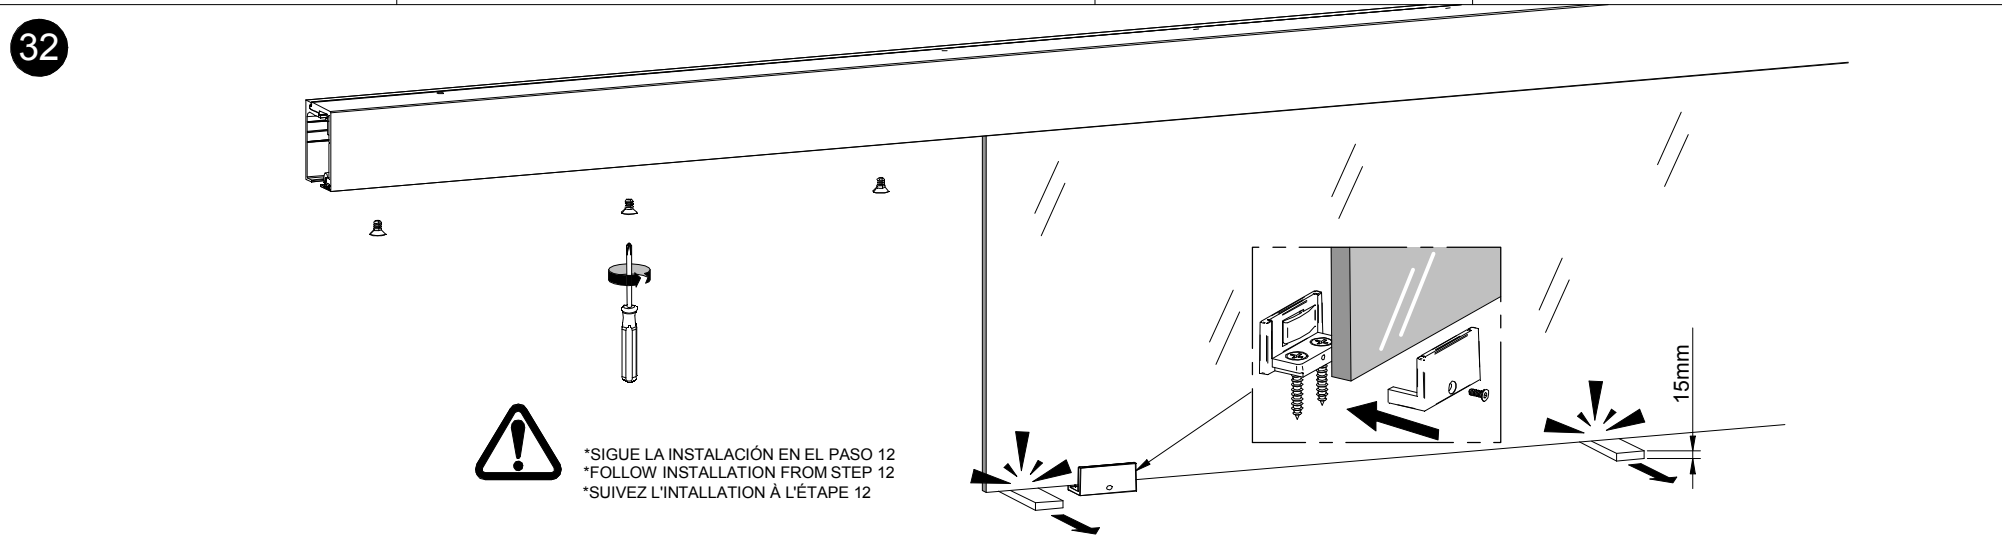
MONTAJE A TECHO / CEILING MOUNT / ASSEMBLAGE A SOSTRE / MONTAGGIO A SOFFITTO

28  Ø5 Ø10

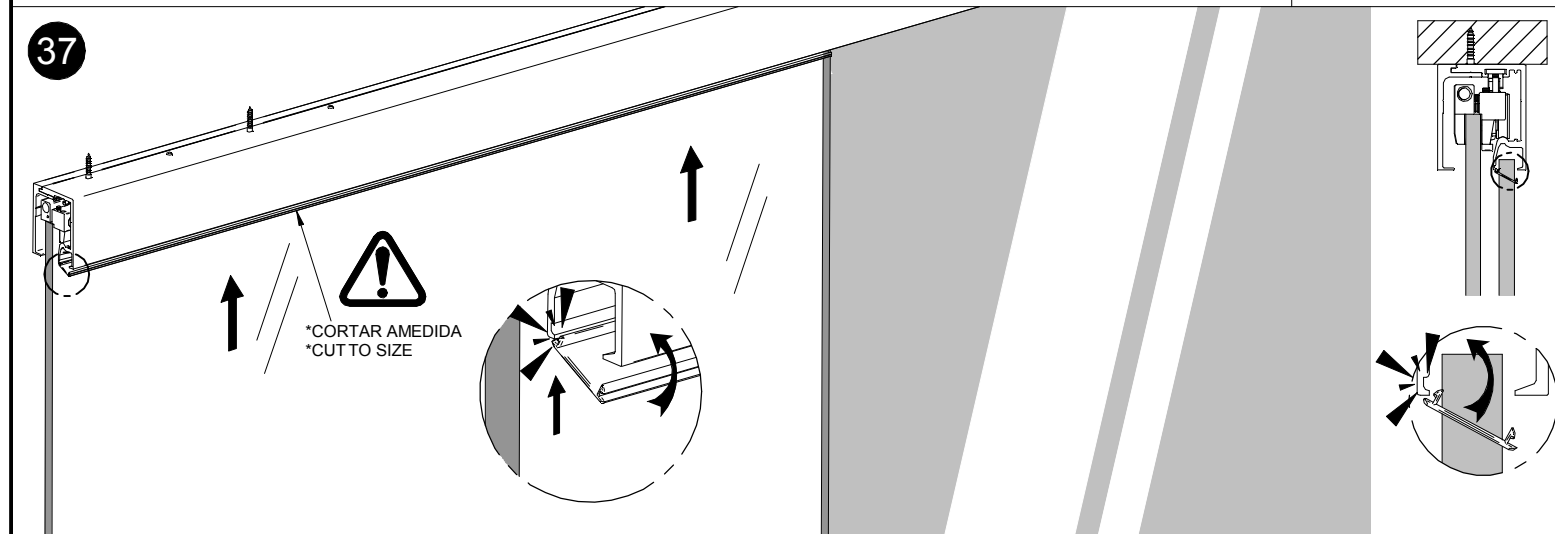
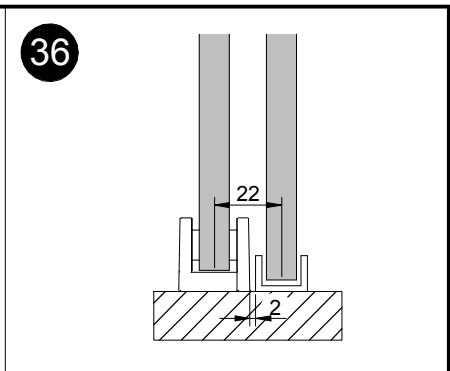
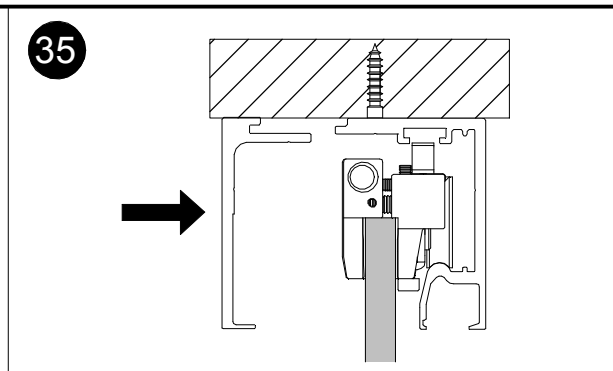
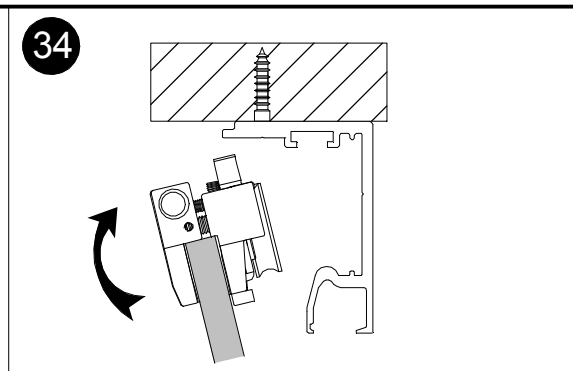
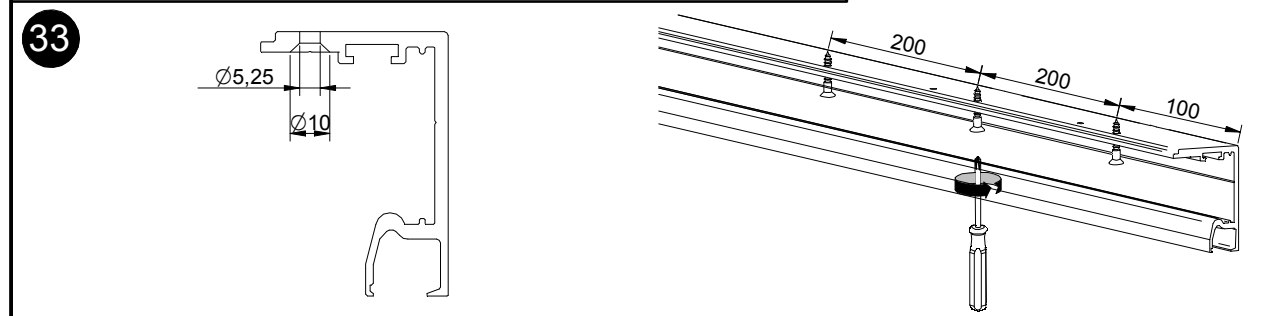
29  200 200 100

30 

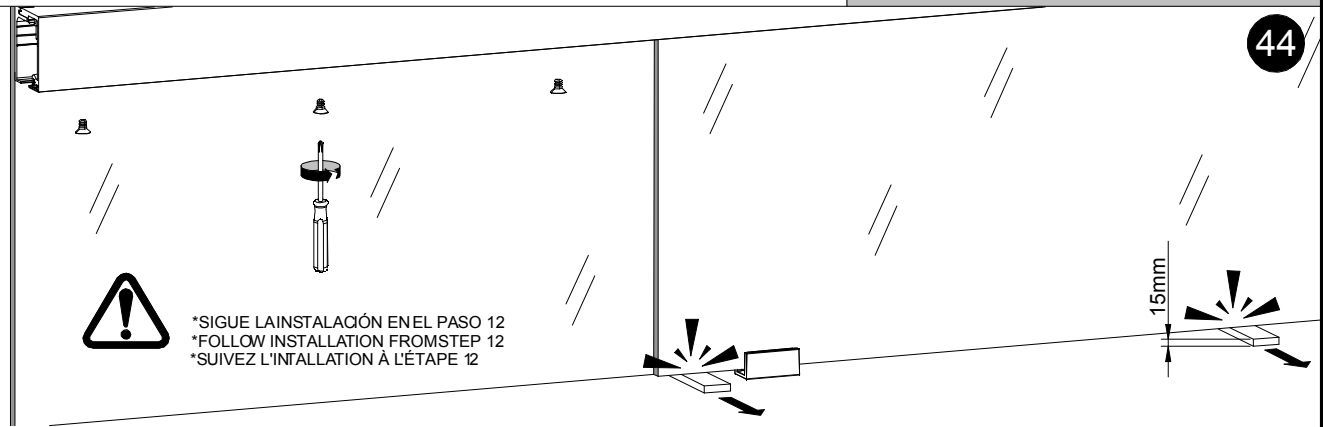
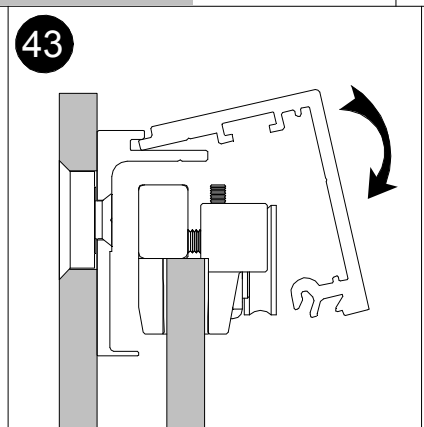
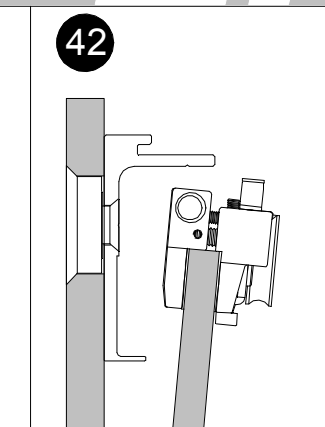
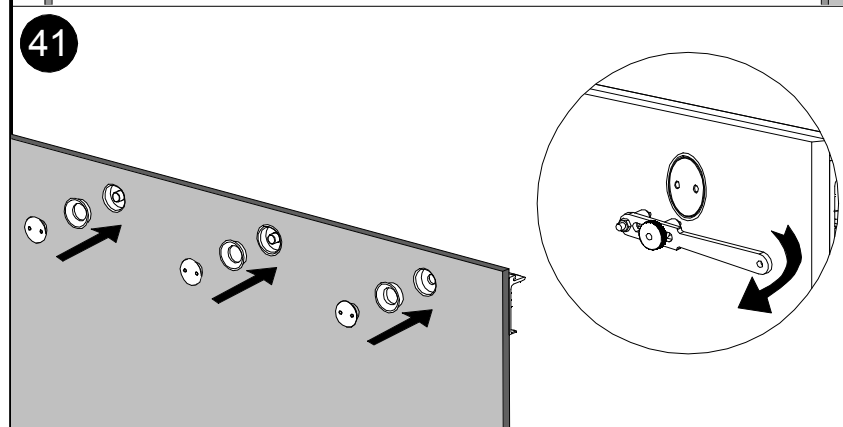
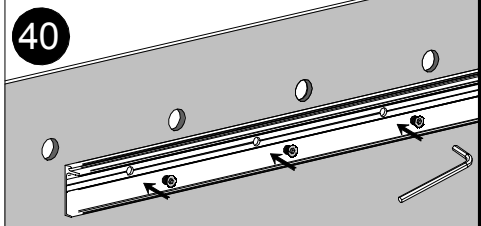
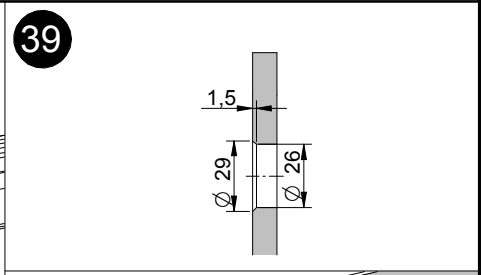
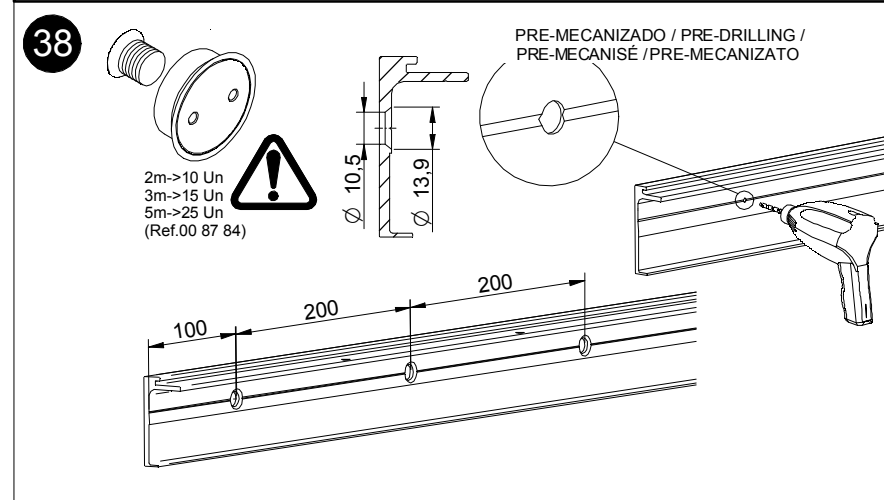
31 

32  ! *SIGUE LA INSTALACIÓN EN EL PASO 12 / *FOLLOW INSTALLATION FROM STEP 12 / *SUIVEZ L'INSTALLATION À L'ÉTAPE 12 15mm

MONTAJE A TECHO CON VIDRIO FIJO / CEILING MOUNT WITH FIXED GLASS /
 ASSEMBLAGE A SOSTRE AVEC VERRE FIXE / MONTAGGIO CON VETRO FISSO



MONTAJE A PARED DE VIDRIO / GLASS WALL MOUNT / ASSEMBLAGE A MUR DE VERRE / MONTAGGIO A MURO DE VETRO



MONTAJE A FALSO TECHO / FALSE CEILING MOUNT / ASSEMBLAGE FAUX PLAFOND / MONTAGGIO A FALSO SOFITTO

